

LED-7342-XXK-G2 INSTALLATION INSTRUCTIONS

These instructions apply to the LED-7342-XXK-G2 Only.

CAUTION - These LED retrofits are designed to operate on line voltage. Ballast must be bypassed prior to installation.

WARNING - Risk of fire or electric shock. LED Retrofit Kit installation requires knowledge of luminaires electrical systems. If not qualified, do not attempt installation.

 
Contact a qualified electrician.

WARNING - Risk of fire or electric shock. Install this kit only in luminaires that have the construction features and dimensions shown in the photographs and/or drawings and where the input rating of the retrofit does not exceed the input rating of the luminaire.

WARNING - Do not make or alter any open holes in an enclosure of wiring or electrical components during kit installation.

WARNING - To prevent wiring damage or abrasion, do not expose wiring to sharp edges of sheet metal or other sharp objects.

This device is not intended for use with Emergency Exits.



- This product must be installed in accordance with the installation instructions.
- Suitable for damp locations. Use in open fixtures only. Do not use where exposed to water.
- Do not attempt to open or modify the lamps in any way.
- Not for use in environments where explosive or corrosive gases are present.
- The lamp may be installed with either the extension adapter or the adjustable arm.
- Do not attempt to install with both the adjustable arm and extension adapter.





with Extension Adapter	Lamp with adjustable Arr

	INSTALLATIO	INSTALLATION REQUIREMENTS				CONTENTS		
	Model	Input Voltage	Base	Fixture Type	Minimum Compartment Diameter (inch) Minimum Compartment Length (inch) 1 pc LED Retrofit lamp 1 pc adjustable arm 1 nc socket extension			
	LED-7342-XXK-G2	120-277VAC	G24Q	For indoor use only in an open or recessed (open) fixture.	6.0	5.0	1 pc Installation Instruction Sheet 1 pc Re-lamping Label	
INCERTICAL CONTRACTOR OF THE C								

INSTRUCTIONS

- 1.) Turn off power to the luminaire at switch and circuit breaker. Allow luminaire to cool before proceeding.
- 2.) Ensure that the luminaire and electrical inputs meet the requirements in the table. Do not install in an enclosed fixture.
- 3.) If a ballast is present it must be bypassed. If desired it may be removed. Please refer to the wiring diagram below. Disconnect or cut the wires to and from the ballast. Connect the line and neutral wires to the socket leads as shown in the wiring diagram. If a neutral is not available, it may be connected line to line.
- 4.) Ensure that the socket is properly mounted and has adequate strength to support the device.
- 5.) The lamp may be installed with the included extension adapter or the adjustable arm. If either of these will be used, please insert the arm or adapter into the socket and ensure it is securely seated. If using the adjustable arm, adjust it so that the lamp will be centered in the fixture.
 - Insert the lamp into the socket and ensure that it is seated properly.
 - Important Note: Do not install using both the adjustable arm and extension adapter.
- 6.) Apply label to the inside of the luminaire where it will be visible during re-lamping.
- 7.) Turn on electrical power to the luminaire and verify proper operation.

If the device does not operate properly, shut off power and contact the manufacturer.

