

## Installation Instructions


## LED HIGH BAY LUMINAIRE INSTALLATION INSTRUCTIONS

These instructions apply to the LED OPEN FIXTURE Only HIGH BAY Lamp models listed in the table below.

CAUTION - These LED retrofits are designed to operate on line voltage. Ballast must be bypassed prior to installation. WARNING - Risk of fire or electric shock. LED Retrofit Kit installation requires knowledge of luminaires electrical systems. If not qualified, do not attempt installation. Contact a qualified electrician.

WARNING - Risk of fire or electric shock. Install this kit only in luminaires that have the construction features and dimensions shown in the photographs and/or drawings and where the input rating of the retrofit does not exceed the input rating of the luminaire. WARNING - Do not make or alter any open holes in an enclosure of wiring or electrical components during kit installation. WARNING - To prevent wiring damage or abrasion, do not expose wiring to sharp edges of sheet metal or other sharp objects. This device is not intended for use with Emergency Exits.

- Prior to installation, please read the entire installation instructions.
- This product must be installed in accordance with the installation instructions.
- Suitable for damp locations. Use in open fixtures only. Do not use where exposed to water.
- Do not attempt to open or modify the lamps in any way.
- Not for use in environments where explosive or corrosive gases are present.

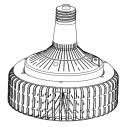

CONTENTS

## INSTALLATION REQUIREMENTS

Model	Input Voltage	Base	Fixture Type	Minimum Compartment Diameter (inch)	Minimum Compartment Length (inch)	
		1 pc LED Retrofit lamp				
LED-8136MXX	120-277VAC	EX39 MOGUL	Indoor Luminaire - Open only.	14.0	8.0	1 pc Installation Instruction Sheet
LED-8130MXX				14.0	8.0	1 pc Re-lamping Label
LED-8132MXX				14.0	8.0	1 pc Safety Cable
Models						
LED-8136MXXC	347VAC	EX39 MOGUL	Indoor Luminaire - Open only.	14.0	8.0	
LED-8130MXXC				14.0	8.0	
LED-8132MXXC				14.0	8.0	
INSTRUCTIONS						

1.) Turn off power to the luminaire at switch and circuit breaker. Allow luminaire to cool before proceeding.

2.) Ensure that the luminaire and electrical inputs meet the requirements in the table. The lamp may be installed in an enclosed fixture either indoors or outdoors.

When installed indoors, the lamp may be installed in an open fixture. Please ensure that the lamp is protected from direct water spray and bugs.

3.) If a ballast is present it must be bypassed. If desired it may be removed. Please refer to the wiring diagram below. Disconnect or cut the wires to and from

the ballast. Connect the line and neutral wires to the socket leads as shown in the wiring diagram. If a neutral is not available, it may be connected line to line.

4.) Insert the lamp into the lamp holder and twist it to lock it in place

5.) Ensure that the socket is properly mounted and has adequate strength to support


the device.

6.) Secure the lamp with existing spring clip and support strap.

Lamp must be supported by the spring clip or strap in addition to the base.

- 7.) Apply label to the inside of the luminaire where it will be visible during re-lamping.
- 8.) Reassemble fixture so that lamp is protected from water and bugs.
- 9.) Turn on electrical power to the luminaire and verify proper operation.

If the device does not operate properly, shut off power and contact the manufacturer.

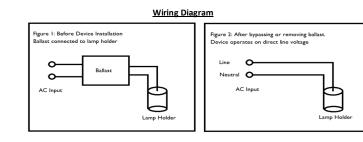

LIGHT EFFICIENT DESIGN = 188 S. NORTHWEST HIGHWAY = CARY, IL 60013 = (847) 380-3540 = www.led-lic.com

Light Efficient Design		Installation Instructions				
LED WORK LIGHT INSTALLATION INSTRUCTIONS						
Please read instructions on the other side of the	This installation					
CONTENTS	INSTALLATION INSTRUCTIONS					
1 LED Retrofit Lamp						
1 Instruction Sheet						
1 Re-lamping label						
INSTALLATION NOTES						
LIGHT EFFICIENT DESIG	N = 188 S. NORTHWEST HIGHWAY = CARY, IL 60013 = (847) 380-3540 =	www.led-lic.com				